

### Parts List

1	Driver / left, mounting bracket
1	Passenger / right, mounting bracket
4	Spacers, M8 x 19mm
4	Flat washer, M8
4	Lock washer, M8
4	Button head cap screw, M8 x 1.25 x 45mm

### Tools Required

Ratchet	Socket, 7mm
Allen wrench, 2.5mm	Allen wrench, 5mm
Torx bit, T-50	Utility knife

### Torque Specifications

	Torque Specifications	
<b>METRIC</b>	M6 bolt	3 ft.-lbs.
	M8 bolt	7 ft.-lbs.
	M10 bolt	16 ft.-lbs.
	M12 bolt	28 ft.-lbs.
<b>SAE</b>	1/4" bolt	3 ft.-lbs.
	5/16" bolt	7 ft.-lbs.
	3/8" bolt	16 ft.-lbs.
	7/16" bolt	20 ft.-lbs.
	1/2" bolt	28 ft.-lbs.

### Level of Difficulty

Easy



Scan for helpful install tips

### Product Image



### Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel and aluminum, polish may be used to clear small scratches and scuffs on the finish. Mild soap may be used also to clean the product.

For black finishes, mild soap may be used to clean the product.

Refer to the table to the left when securing hardware during the installation process to help prevent damage to the product or vehicle.

### Step 1

Remove the four hinge bolts on the hood of the Jeep following the instructions below.

Using a utility knife, cut the paint around the fasteners to aid in removal and prevent the paint from peeling off of the hinge.

Using a ratchet and a T-50 Torx bit, remove the fasteners. Make sure to put pressure down on the fastener to prevent stripping.



### Step 2

If desired, the stainless steel logo plate can be removed to route light wiring under the logo plate.

Using a 2.5mm Allen wrench and a 7mm socket, remove the four fasteners holding the logo plate to the bracket.

If the logo plates are removed, make sure to tighten all logo plate fasteners to 20 inch-pounds when reinstalling.



### Step 3

Install the LED lights using the light manufacturer's fasteners. The brackets are designed to accommodate an M6 or M8 fastener. If the fasteners are larger than M8, some drilling may be required

Fasten the LED light bar to the brackets.


Snug the fasteners, but do not fully tighten.



### Step 4

Place two spacers on each hinge of the Jeep. Place the bracket / light bar assembly onto the spacers on the Jeep.

It is recommended that two people hold the light bar in place while the fasteners are secured on the spacers.

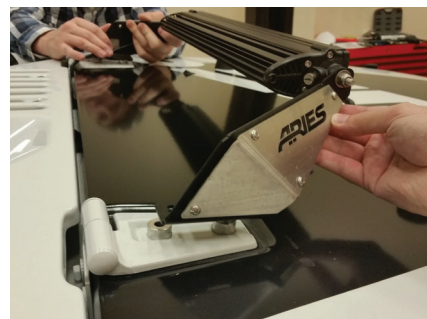

### Step 5

Place two M8 button head cap screws through a lock washer and flat washer.

Loosely snug the passenger-side bracket onto the hood of the Jeep.


Repeat this process on the driver side.



### Step 6

Tighten the four M8 button head cap screws to the Jeep using the 5mm Allen wrench.

Tighten the fasteners holding the LED light to the brackets according to the light manufacturer's specifications.

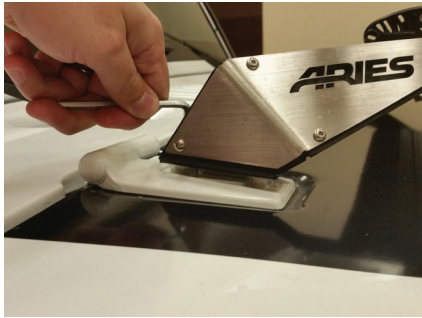

### Step 7

Congratulations on the installation of your new ARIES hood light mounting brackets.

With the hood light mounting brackets installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

