



BX1851

2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

Please read **BOTH** these Installation Instructions and the General Instructions prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do “fit work”. If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
- Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.

Attachment Tab Height: 16”

Attachment Tab Width: 19”

Serial Number

Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner’s manual for manufacturer’s towing specifications.

Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318



WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.


BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

Instruction Notes: The fascia, temperature sensor, baffle and windshield washer fluid reservoir are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8869 Tail Light Wiring Kit is recommended for this vehicle.

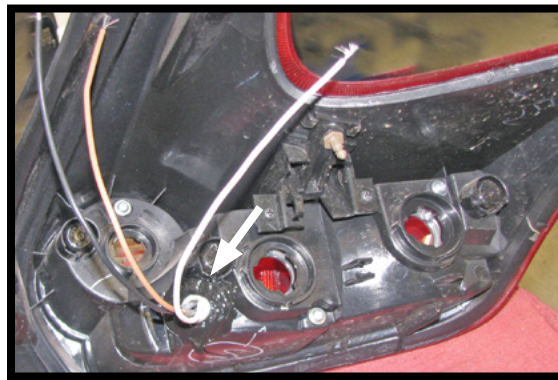

Drill a hole according to the tail
light wiring kit instructions.


NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use Loctite® Red on all bolts before tightening. Tighten all bolts according to the torque chart provided.
- Dealer or installer be certain the user receives these instruction sheet.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.

BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

Tools Required

- Large Vise Grip
- Flat Screwdriver
- Utility Knife
- Hammer
- Torque Wrench
- Drill
- Reciprocating Saw
- Tape Measure
- Loctite® RED
- 13/32" Drill Bit
- 1/2" Drill Bit
- 1-1/4" Hole Saw
- 10MM Socket
- 17MM Socket
- 9/16" Socket
- 9/16" Wrench
- 3/4" Socket
- 3/4" Wrench

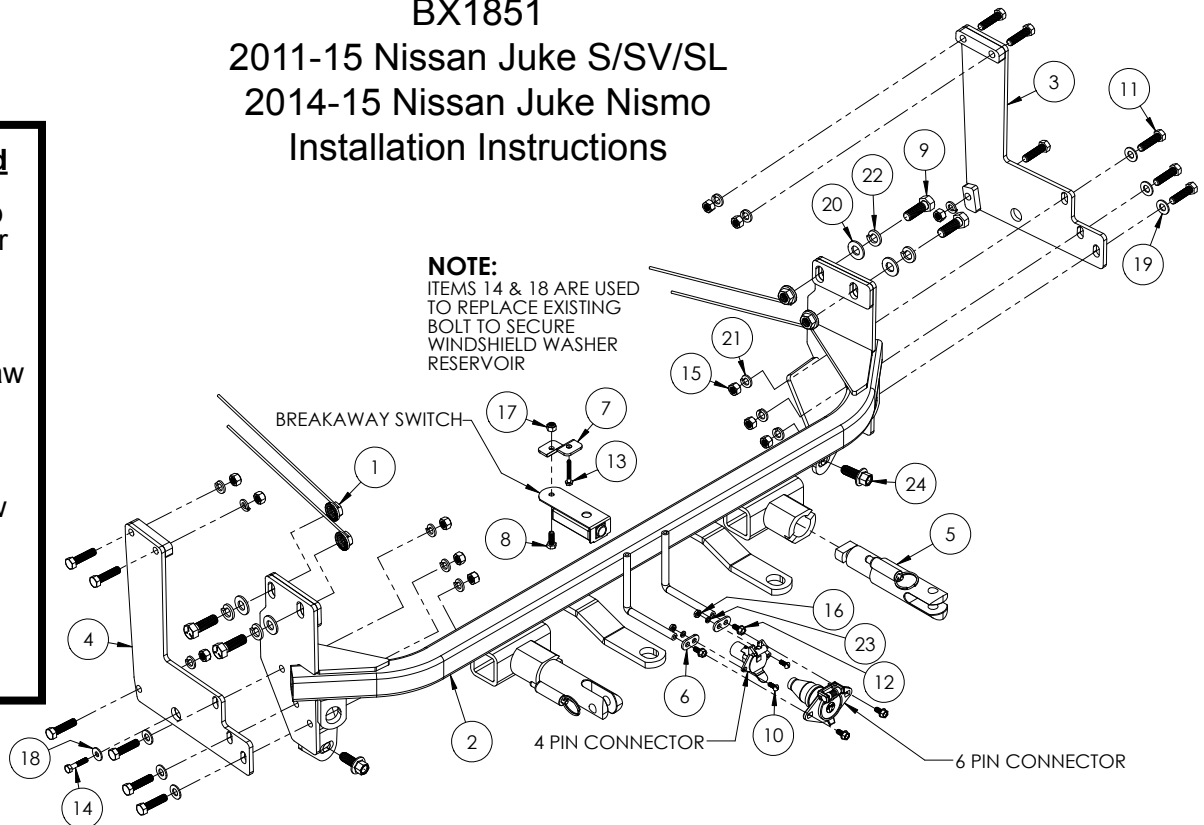


Item No.	Part No.	Description	Qty.
1.....	61-4029	1/2"-13 Whiz Nut w/ 10" Wire	4
2.....	61-7343	BX1851 Baseplate	1
3.....	61-7344	DS Support Plate	1
4.....	61-7345	PS Support Plate	1
5.....	62-3468	Attachment Tab Assembly with Hole.....	2
6.....	101-5822	4 Way Connector Adapter.....	2
7.....	101-7599	Breakaway Bracket.....	1
8.....	201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP.....	1
9.....	201-0051	1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5, ZP	4
10.....	201-0192	#10-32 1/2" Round Slotted Head Screw	2
11.....	201-0440	3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP	12
12.....	201-0979	#12-14 x 1" Self Drilling Screw, ZP	2
13.....	201-0654	#10-16 x 1" Self Drilling Screw, ZP	1
14.....	201-0655	6MM-1.0 x 30MM Hex Head Bolt, ZP	1
15.....	202-0003	3/8"-16 Hex Nut, ZP.....	12
16.....	202-0047	#10-32 Hex Nut	2
17.....	202-0102	1/4"-20 Hex Nylon Nut, ZP.....	1
18.....	203-0001	1/4" Flat Washer, ZP	1
19.....	203-0003	3/8" Flat Washer, ZP	6
20.....	203-0005	1/2" Flat Washer, ZP	4
21.....	203-0010	3/8" Lock Washer, ZP	12
22.....	203-0012	1/2" Lock Washer, ZP	4
23.....	203-0054	#10 Lock Washer, ZP	2
24.....	Existing	Frame Bolt	2
25.....	226-0046(not shown).....	Class III Safety Cables	2
26.....	229-0359(not shown).....	3/8" Quicklink, ZP	2
27.....	290-0437(not shown).....	Black Cap Plug Receiver	2

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.


BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

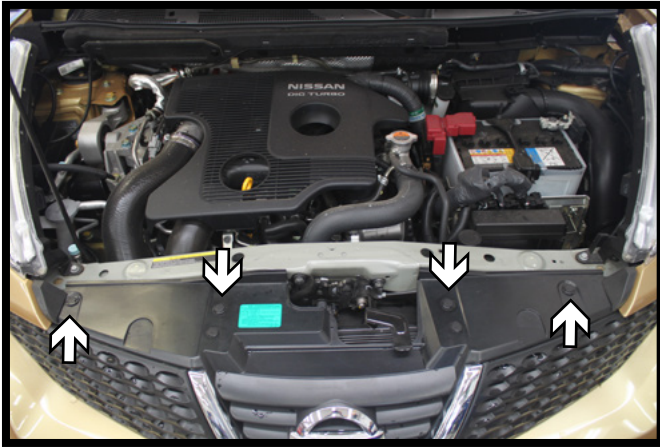

1. Remove the four (4) push pins from the top edge of the fascia.



2. In the wheel well, remove the two (2) push pins. There is one (1) on the lower edge and one (1) on the upper edge (inset). Do this on both sides of the vehicle.

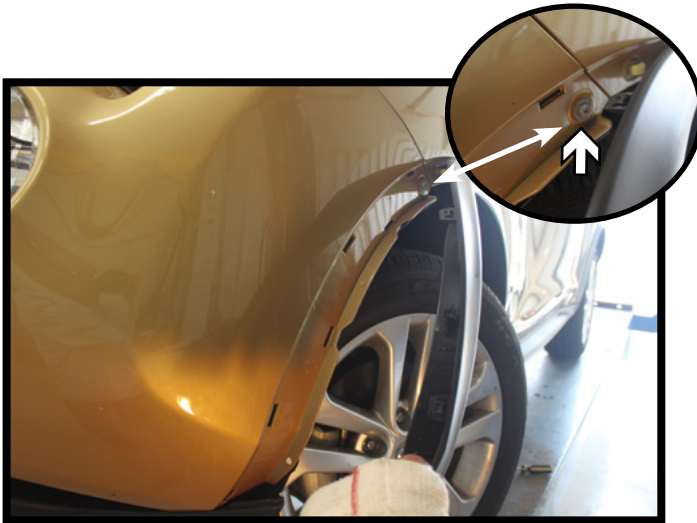


3. Gently pry the fender flare away from the vehicle. Using a 10MM socket, remove the exposed screw at the fascia and fender seam. Do this on both sides of the vehicle.




4. Using a 10MM socket, remove the four (4) screws from the underside of the fascia in front of the tire. There are two (2) on each side.

BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions


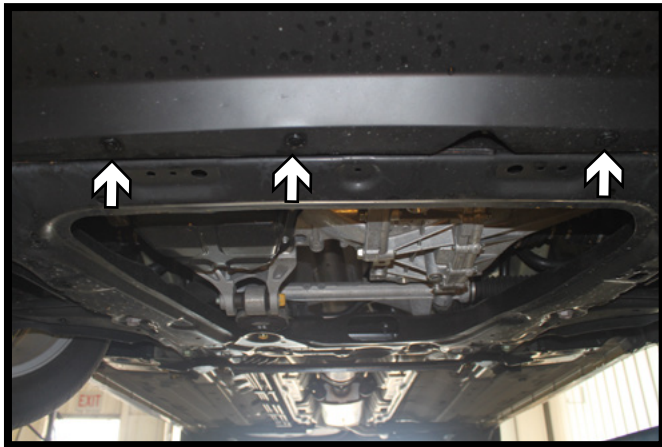


5. Remove the three (3) push pins from the underside of the fascia towards the center. Gently pry the fascia from the vehicle, disconnecting any electrical connections and set the fascia aside.

Note: Nismo models will have screws instead of push pins.

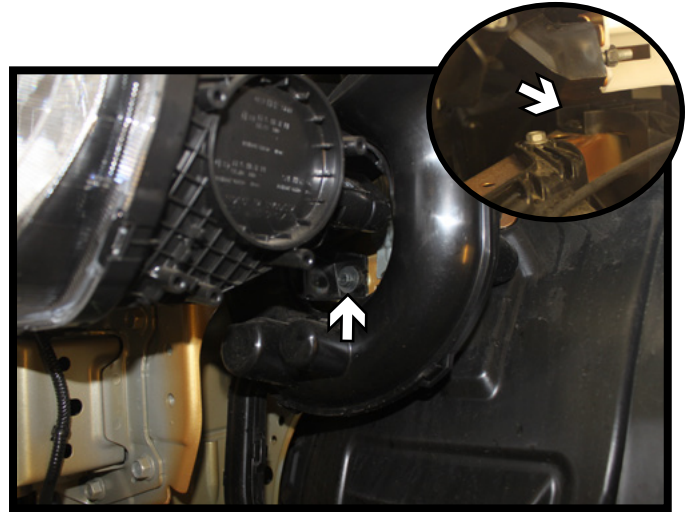


6. On the driver side, using a 10MM socket, remove the screw from the lower section of the baffle. Remove the push pin from the upper section just below the blinker (inset). Set the baffle aside.

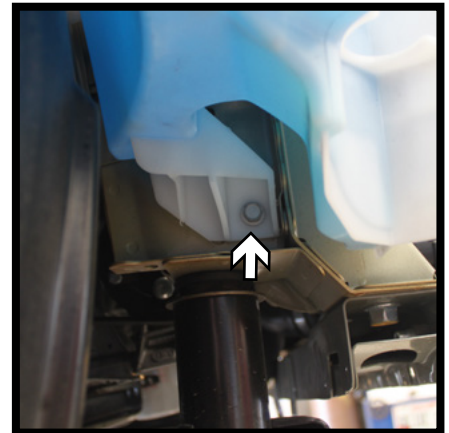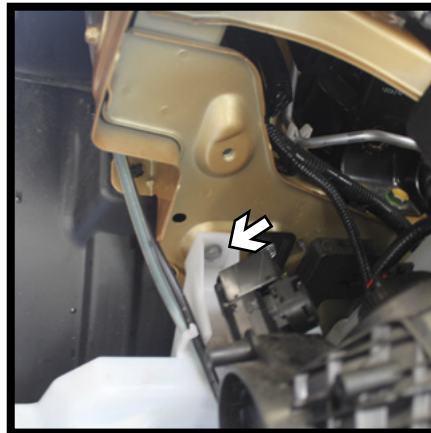


7. On the passenger side, remove the push pin from the washer reservoir just below the blinker (left). Using a 10MM socket, remove the upper screw (middle) and lower screw (right) from washer reservoir. Disconnect all lines and set reservoir aside.


BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

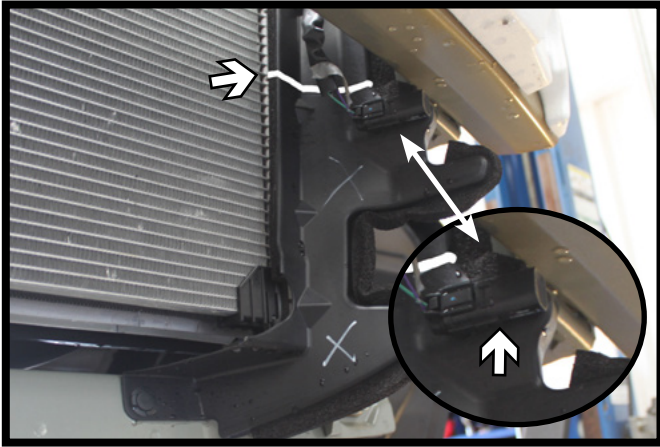

8. On the driver side, remove the temperature sensor from the shrouding (inset). Then trim off the lower section of the shrouding flush with the bottom of the bumper.

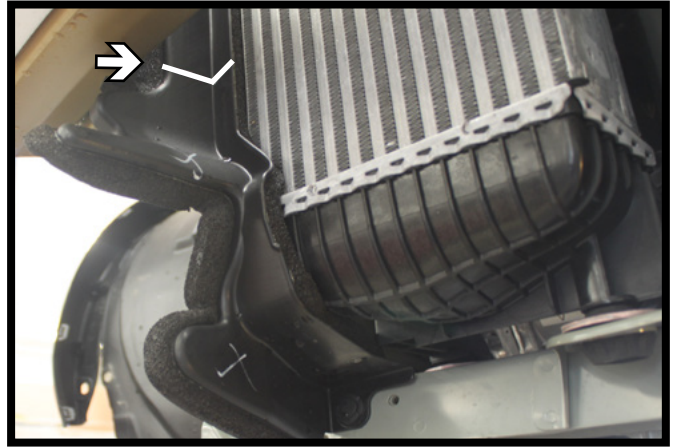


9. On the passenger side, trim the lower section of the shrouding off flush with the bottom of the bumper.

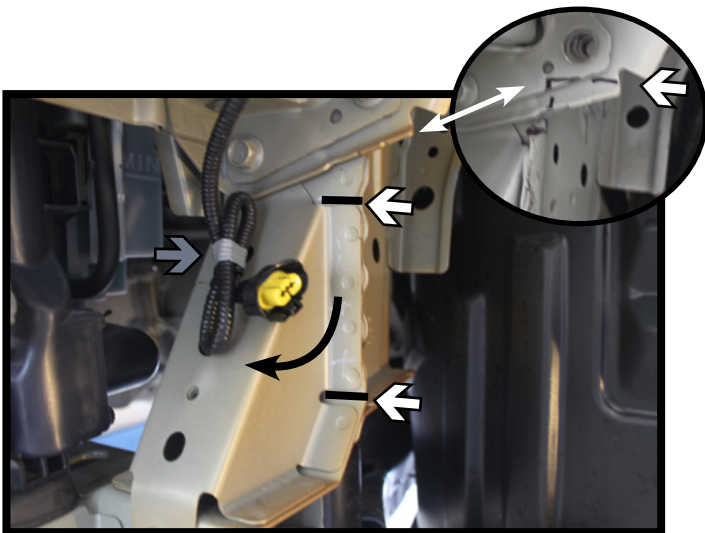

10. Cut two (2) slits into the frame webbing as shown. Bend this section of webbing forward flat against the frame. Unclip the wiring harness from the face of the frame and secure out of the way. Do this on both sides of the vehicle.

On the driver side only, trim the webbing lip under the bolt (inset).

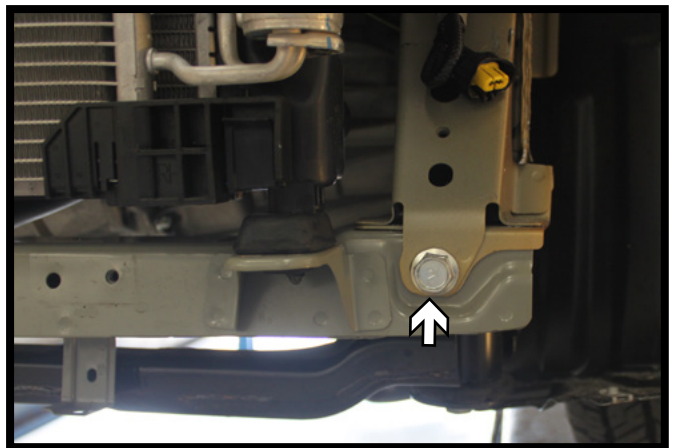


11. Using a 17MM socket, remove the two (2) bolts from the lower frame. There is one (1) on each side.

BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions




12. Using a hammer, flatten the ridge behind the frame webbing. Do this on both sides of the vehicle.

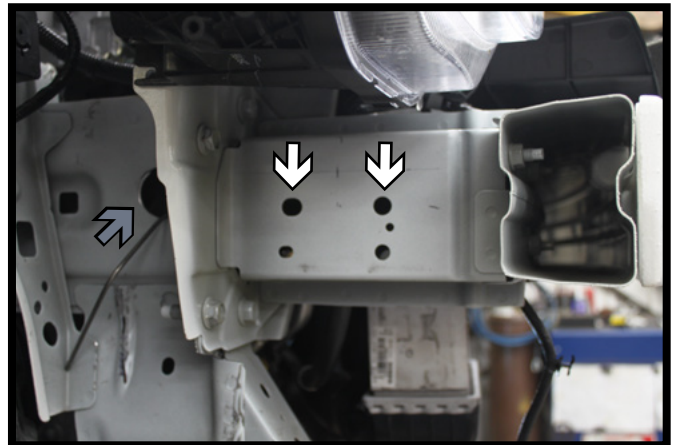

13. Using a 1/2" drill bit, ream out the two (2) top existing holes for bolt clearance (white).


Using a 1-1/4" hole saw, drill an access hole behind the flange as shown (gray). Do this on both sides of the vehicle.

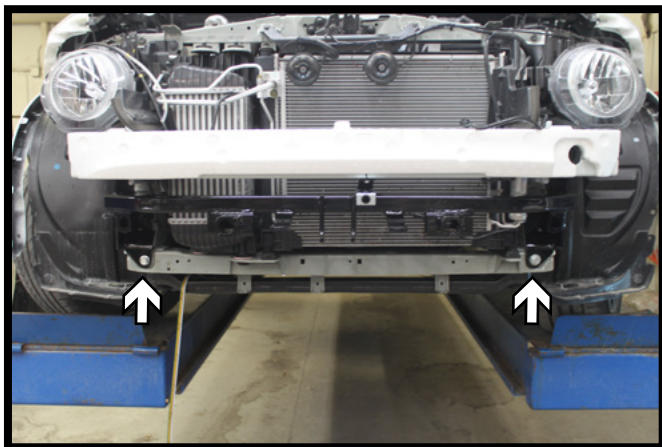


14. Position the baseplate onto the vehicle, starting the front two (2) existing bolts.

15. Install 1/2"-13 x 1-1/2" bolts with 1/2" lock and flat washers into the upper holes with a 1/2" whiz nuts on the inside of the frame using the access hole (white). Do this on both sides of the vehicle. Check for level and fully tighten the four (4) 1/2" bolts and two (2) existing bolts in front.

Install the support plate onto the baseplate with 3/8"-16 x 1-1/2" bolts with 3/8" flat washers and 3/8" lock washer and nuts on the inside (gray). Keep the plate level with the top of the frame (black) and fully tighten the 3/8" hardware. Do this on both sides of the vehicle.

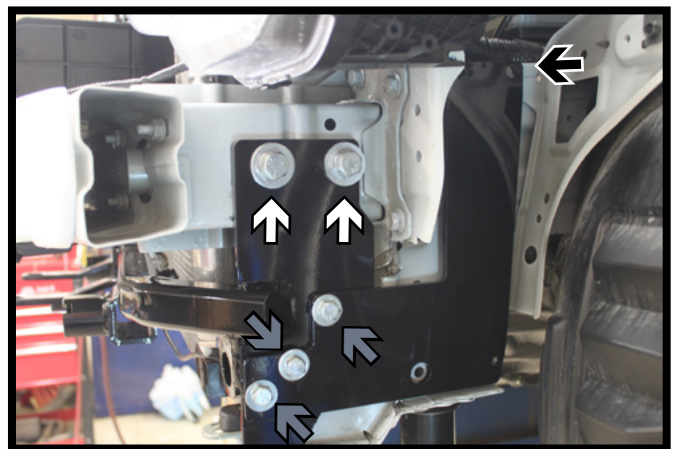


BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

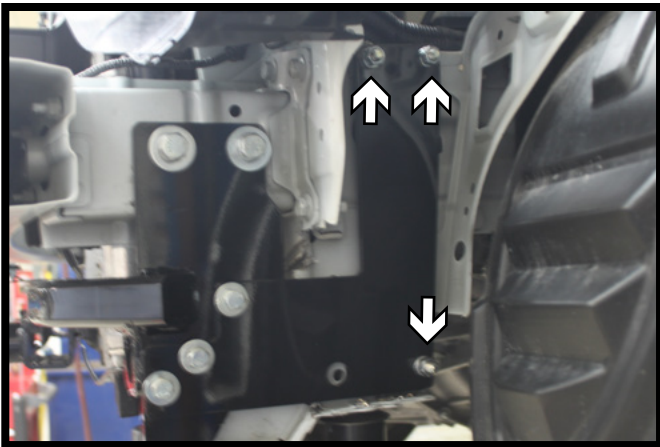

16. Using a 13/32" drill bit, drill the three (3) support plate holes thru the frame. Install 3/8"-16 x 1-1/2" bolts with 3/8" lock washers and nuts on the inside of the frame. Do this on both sides of the vehicle.

17. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. Secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.

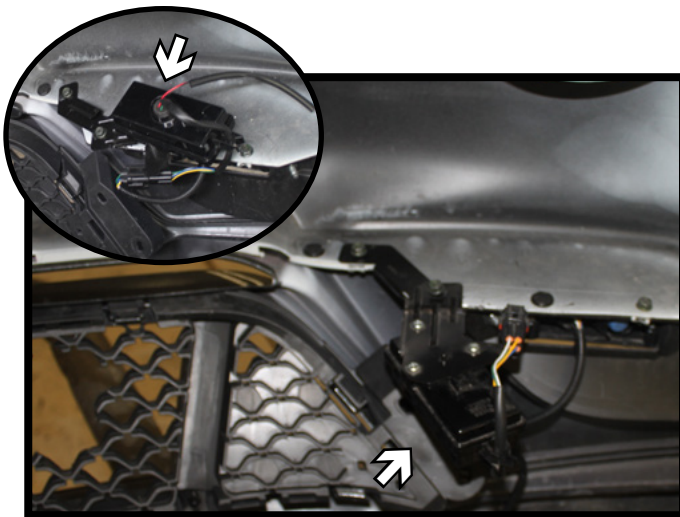

18. **Nismo Only:** On the backside of the fascia, unscrew the fog light box and flip upside down and reattach to the fascia as shown for baseplate clearance. Do this on both sides of the fascia.



19. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the washer reservoir using the supplied lower bolt. Reinstall the baffle and fascia.

BX1851
2011-15 Nissan Juke S/SV/SL
2014-15 Nissan Juke Nismo
Installation Instructions

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2015 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com