

Installation Instructions BX2310 Hyundai Tiburon 2000


Serial No.

The front bumper facia and turn lights are removed for baseplate installation. Holes need to be drilled. DEALER OR INSTALLER: BE CERTAIN THE USER RECEIVES THE INSTRUCTION SHEET.



Figure 1

- Remove the lower screw from the bottom of the bumper facia. Figure 1.
- Looking up to the back side of the front grill, remove the phillips screw and 10mm Hex bolt just above the phillips screw. Figure 2 and 3.



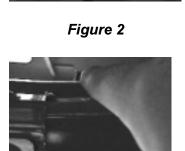


Figure 3



Figure 4

- 4. Open the hood and remove the screw on top of the head light assembly. Figure 5. Pull the assembly out and remove the Hex nut holding the bumper facia. Figure 6.
- 5. Remove the push pins from the top of the bumper facia, remove the top molding and pull facia from the vehicle. Figure 7.

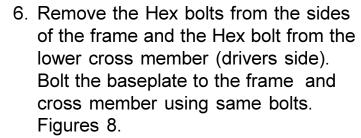




Figure 5



Figure 6



Figure 7



Figure 8





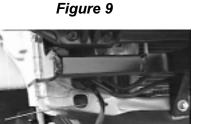


Figure 10

7. Drill a 3/8" hole for the passengers side brace and use 3/8" hardware to fasten to frame. Tighten all bolts according to the chart in the General Instruction Sheet. Figure 9. The 3/8" nut plate can be inserted through the large opening in the cross member. Figure 10.

8. Replace the bumper facia and head lights. The 10mm bolt that is removed in step 2 will not be replaced.

Tools Required

8MM Wrench 9/16" Wrench Loctite 3/8" Drill Bit

14MM Wrench Needle Nose Pliers Phillips Screw Driver



Parts List

Ref. No.	Qty.	Part No.	Description
1	1	61-5469	Weldment, Baseplate, BX2310
2	2	61-5208	
3	1	201-0440	
4	1	203-0010	
5	1		8MM-1.25 x 30MM Hex Bolt Grd. 5, ZP
6	1	203-0102	8MM Lock Washer, ZP
7	2	201-0553	
8	2	201-0192	#10-32 x 1/2 Slot, Rd. Hd. Screw
9	2	202-0047	#10-32 Hex Nut
10	2	203-0054	#10 Lock Washer
11	2	101-5822	Adapter, 4 Way Connector
Е	4		Existing Bolts, Side Frame

