



BX2607

2008-10 Mercury Sable 2008-09 Ford Taurus Installation Instructions

Serial Number

Please read BOTH these Installation Instructions and the General Instructions before attempting to install or operate this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment necessary and knowledge to do “fit work”. When necessary Blue Ox® Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
- Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use hardware supplied in the hardware kit and existing hardware specified in the Baseplate Installation Instructions.

Attachment Tab Height: 13-1/2”

Attachment Tab Width: 22”

Bolt Torque Specifications
Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117

Confirm the towability and pre-towing procedures for your vehicle with the owner’s manual or contact the vehicle’s manufacturer for specific towing procedures.

Bolt Torque Specifications
Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4”	10	14
5/16”	19	29
3/8”	33	47
7/16”	54	78
1/2”	78	119
5/8”	154	230



If the front of your vehicle looks different than this, call us at (402) 385-3051.

⚠ WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

BX2607

2008-10 Mercury Sable 2008-09 Ford Taurus


Installation Instructions

Parts List

Ref. No.	Qty.	Part #	Description
1	1	61-6623	WLDM'T, BASEPLATE, BX2607
2	10	61-5208	WLDT, NUT PLT, 1/4X1X1, 3/8" BLT WIR
3	6	201-0368	3/8-16 X 1 1/4" HEX HEAD BOLT,GRD. 5
4	4	201-0336	3/8-16 X 2 1/2" HEX BOLT GRD. 5 ZP.
5	10	203-0010	3/8" LOCK WASHER, ZP
6	2	201-0553	1/4-20 X 1/2" HX.WSHD.TYPE F TCS, ZP
7	2	201-0192	10-32 X 1/2" SLOT, RD. HD. SCREW
8	2	203-0054	#10 LOCK WASHER
9	2	202-0047	#10-32 HEX NUT
10	2	101-5822	ADAPTER, 4 WAY CONNECTOR
11	2	62-3468	ATT TAB ASSY, REM, SF/SB, 1 HOLE
	2	226-0046	BASEPLATE SAFETY CABLE, 36" CL III (Not Shown)
	2	229-0359	QUICKLINK, 3/8, ZP (Not Shown)
	2	290-0437	RECEIVER, CAP PLUG (BLK) (Not Shown)

Tools Required

Loctite® RED
 8mm Socket
 10mm Socket
 9/16" Socket
 Phillips Screwdriver
 1-1/4" Hole Saw
 13/32" Drill Bit
 Hack Sawblade

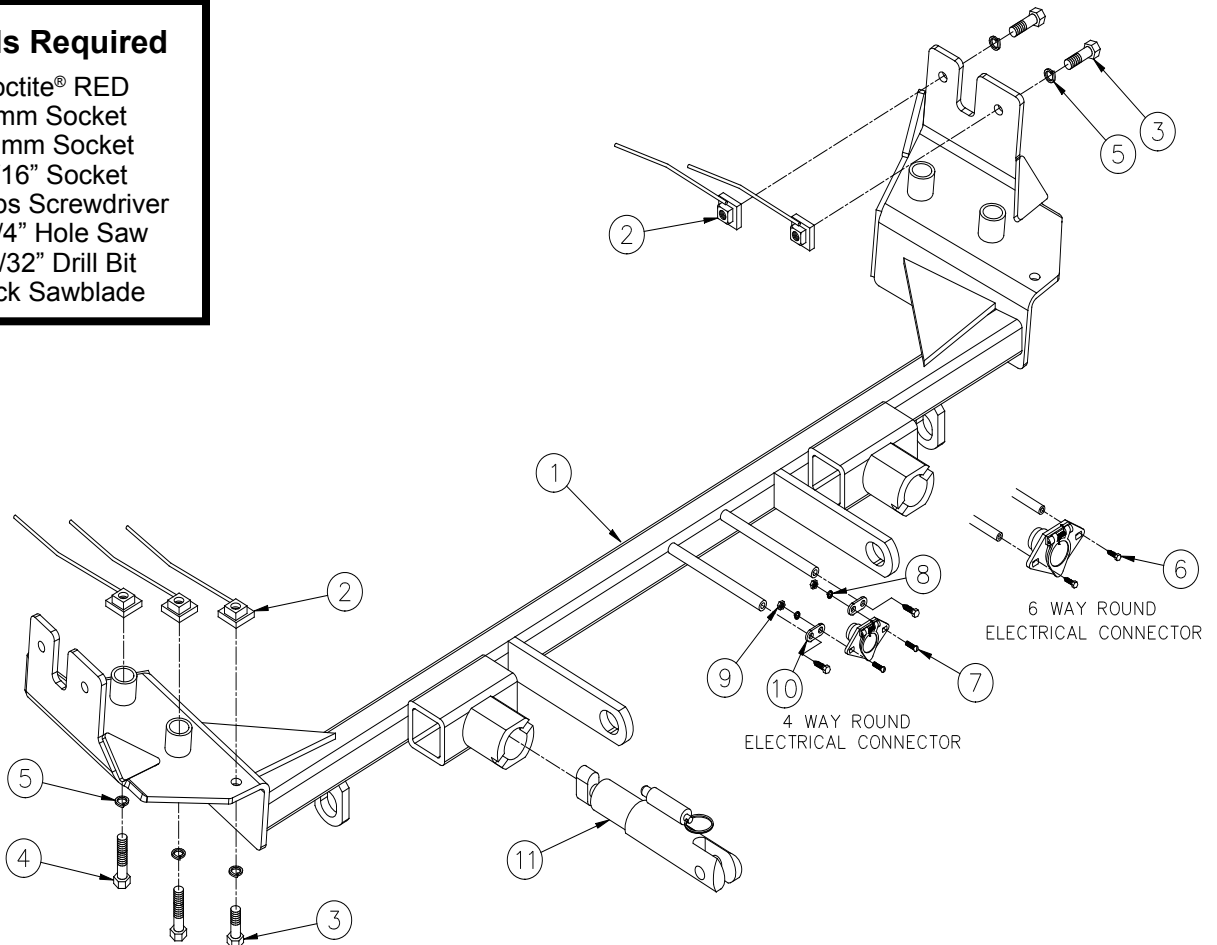

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

BX2607
2008-10 Mercury Sable
2008-09 Ford Taurus
Installation Instructions

Vehicle Weight: Motorhome mount tow bars are recommended for use with this baseplate. Due to the design of the removable tabs, the RangeFinderII, Adventurer, and Ambassador tow bars can not be used. The Acclaim tow bar may be used, but will not fold and store on the front of the vehicle. Adapters, except the BX8833 and BX88151, can not be used with this baseplate.

Installation Notes: The fascia, guard, washer reservoir, bolts, push pins and screws are removed for installation. Drilling is required. Trimming is required.


The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for auto manufacturer's tolerances. These minor adjustments may include filing a hole slightly, bending electrical rods or bending end plates.

The BX8848 4-Diode Wiring Kit is recommended for this vehicle.

Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.

Do not use the towed vehicle for storing luggage, equipment, etc. This may cause you to exceed the towing capacity of the tow bar, baseplate, and its accessories.

Installation Instructions:

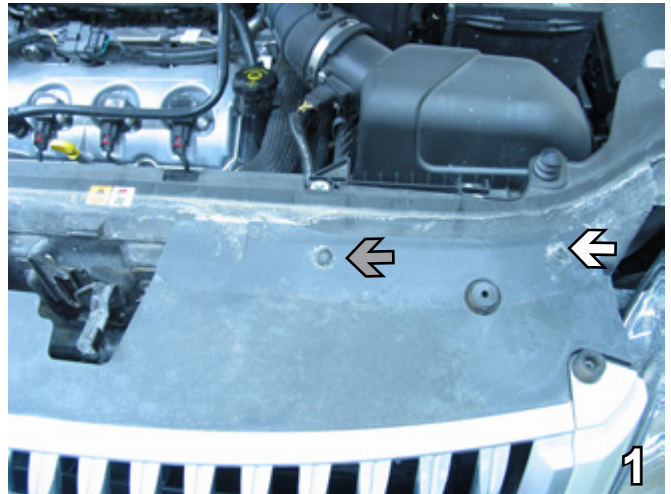

1. Using a 8MM socket, remove a metric bolt from the corner of the plastic on top of the fascia. Also using a flat screwdriver, remove the push pin (grey arrow). Do this to both sides of the vehicle. Set bolts and push pins aside to be reinstalled later.




2. Using a Phillips screwdriver, remove three screws, located just forward of the front tire. Do this to both sides of the vehicle. Set screws aside to be reinstalled later.

BX2607
2008-10 Mercury Sable
2008-09 Ford Taurus
Installation Instructions




3. Using a Phillips screwdriver, remove two screws, located in front underneath on the driver's side. On the passenger side, remove the two screws and using an 8MM socket, remove one bolt. Set screws and bolt aside to be reinstalled later.
4. Still underneath, remove the four push pins, two on each side, holding the plastic guard. Set guard and push pins aside to be reinstalled later.


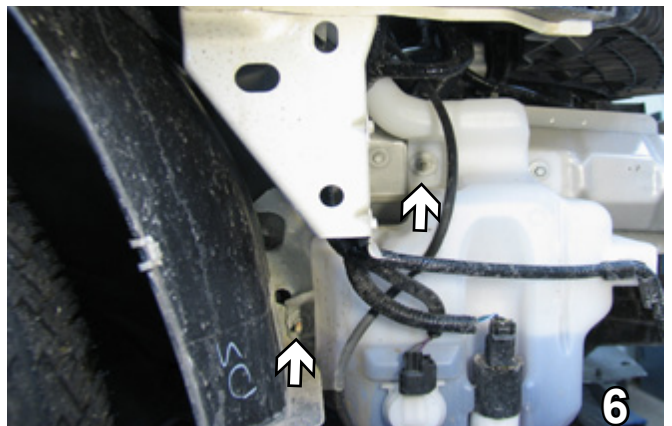


5. In front right under the opening, using an 8MM socket, remove the three bolts. Pull fascia corners out to the side of vehicle, then pull forward. Set fascia and bolts aside carefully, to be reinstalled later.
6. On the passenger side in order to remove the washer reservoir, remove the two bolts from the left side using an 11MM socket. Set bolts aside to be reinstalled later.

7. Continuing with the washer reservoir, use an 8MM socket to remove the top right metric bolt which will not be reinstalled. Unplug everything and completely remove. Then using a hack saw blade trim the tab off. Set the washer reservoir aside to be reinstalled.

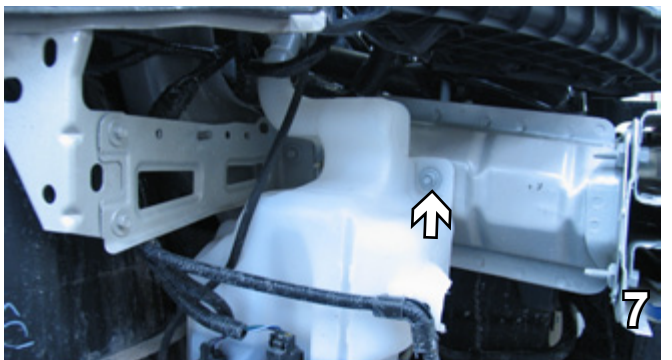

BX2607
2008-10 Mercury Sable
2008-09 Ford Taurus
Installation Instructions

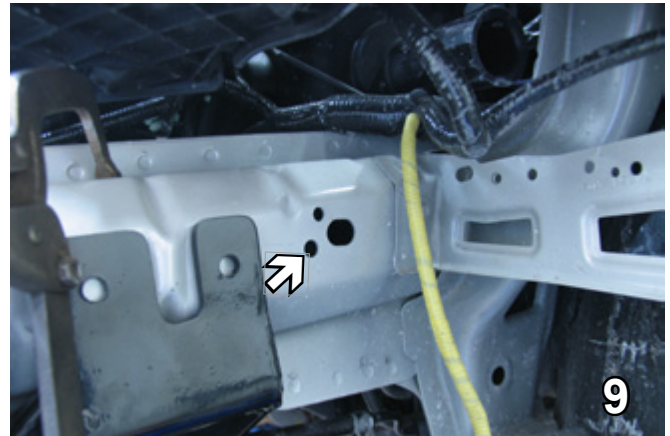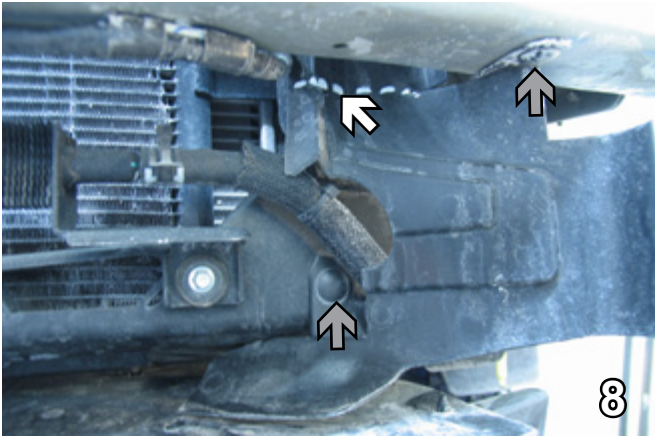

8. Under the bumper, using a hack sawblade cut the piece of plastic as shown. Using the Phillips screwdriver, remove the two push pins (gray arrows). Do this on both sides. Remove the lower plastic and discard pieces and pins, they will not be reused.
9. Using a 1 1/4" hole saw, drill a hole in the bottom round hole. Do this to both sides of vehicle.






10. Slide the base plate straight up from the bottom and clamp.
11. Be sure the base plate is level across the top with respect to the vehicle frame, and up as far as possible. All the holes need to be drilled with a 13/32" drill bit. First drill a hole across the side and start a 3/8"-16 x 1 1/4" bolt with a 3/8" lock washer and a 3/8"-16 nut plate, inserted into 1 1/4" drilled hole. Continue with the second hole. Do this to both sides. Tighten with Loctite Red.


BE SURE TO USE LOCTITE® RED ON ALL BOLTS BEFORE TIGHTENING. TIGHTEN ALL BOLTS ACCORDING TO THE TORQUE CHART ON THE FRONT PAGE OF THESE INSTRUCTIONS OR ON PAGE 3 OF THE BASEPLATE TOWING GENERAL INSTRUCTIONS.

When using power drills be aware of the dangers of torque and drill bit length.

BX2607
2008-10 Mercury Sable
2008-09 Ford Taurus
Installation Instructions

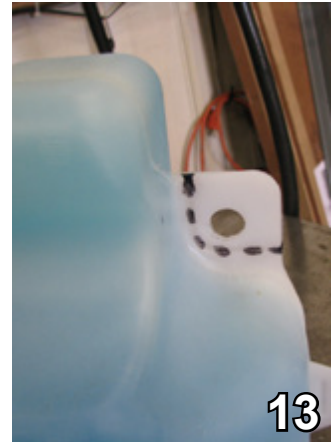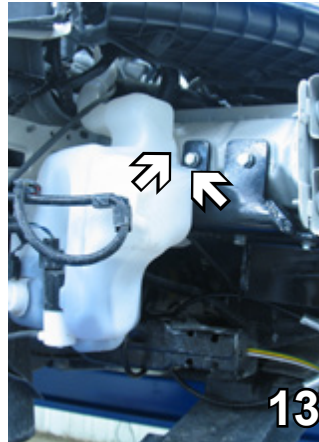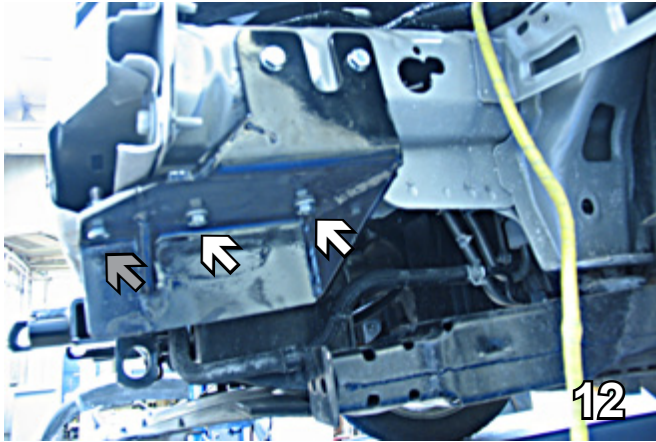

12. Moving underneath the base plate, drill three remaining holes using a 13/32" drill bit. Insert a 3/8"-16 x 1 1/4" bolt into the front hole (grey arrow). Use 3/8"-16 x 2 1/2" bolts for the other two holes. They all need 3/8" lock washers and 3/8"-16 nut plate, tighten with Loctite Red. Do the same on both sides of the vehicle. NOTE: Due to the compact space underneath the baseplate, drilling at an angle may be required.
13. On the passenger side before reinstalling the washer reservoir, using a hack sawblade cut off the top right installation tab about 1 1/2"x 1 1/2". Be careful not to cut into reservoir. Reinstall the water tank and connect the hoses and plug in electrical connections.

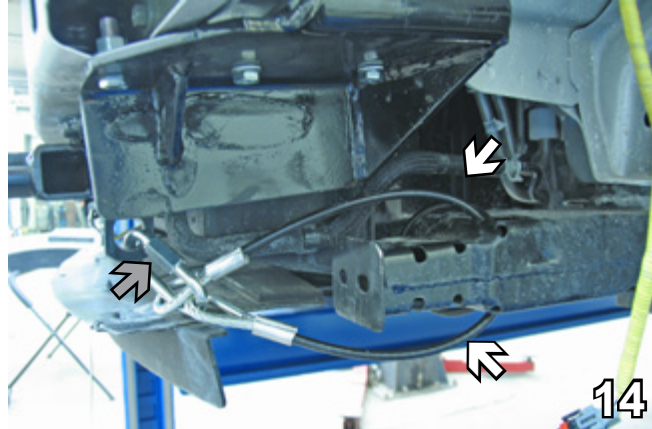

14. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate (gray arrow). The photo above shows the recommended installation of the cables to frame of vehicle (white arrows). Additional options may interfere with suggested mounting; in this case secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this to both sides.
15. Reinstall fascia, guard, bolts, pushpins and screws. The installation of the baseplate is complete.

Install the tow bar and safety cables according to the instructions provided in their packages. When demonstrating this to the customer, be sure to include all the contents and packages.

Do **NOT** substitute other devices if the tow bar pins and clips are misplaced.

Be sure that ALL electrical connections are plugged in properly and functioning BEFORE installing the fascia.

DEALER or INSTALLER:
Be certain the user receives the instruction sheets for their products.

BX2607
2008-10 Mercury Sable
2008-09 Ford Taurus
Installation Instructions



Shown without removable tabs installed.



Shown with removable tabs installed.

CUSTOMER SERVICE COMMITMENT

Blue Ox is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or missing parts.



© 2011 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com