CLASS 2 TRAILER HITCH R2-0378

Honda Odyssey


TOOLS REQUIRED: **DRILLS: 1/2"**

WRENCHES: 19mm, 3/4"

3,500 LB GROSS TRAILER WEIGHT, 300 LB TONGUE WEIGHT. WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS AND LIMITATIONS. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

WARNING: USE ONLY RIGID HITCH APPROVED AND MANUFACTURED DRAW BAR INSERT OR WARRANTY WILL BE VOID

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

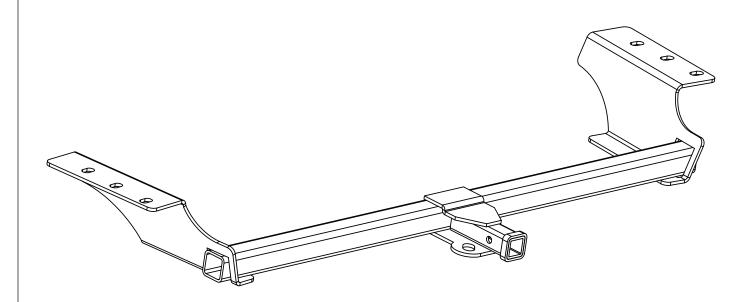

- 1. Lower vehicle exhaust.
- 2. Raise hitch into position and loosely attach 2 metric bolts into existing weld nuts in each side frame member, using a 7/16" conical washer under the head of each bolt.
- Use hitch as a template to drill the 1/2" forward most hole on the passenger side frame member, and 3. enlarge the forward most mounting hole on the left frame member with 1/2" drill.
- Insert handle nut into each side frame member through access hole just forward of hitch side bracket, 4. align with drilled hole and attach with 1/2" conical washer and 1/2"-13 hex bolt.
- Re-install vehicle exhaust. 5.

Thank you for purchasing a Rigid Hitch

TIGHTEN ALL FASTENERS TO THE TORQUE SPECIFICATIONS SHOWN BELOW

Hardware Package:

(4) M12 x 1.25 x 35mm hex bolts

(4) 7/16" conical washers (2) 1/2"-13 x 1-1/2" hex bolts

1/2" conical washers 1/2"-13 handle nuts

(1) R2-0206 draw bar kit

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

BOLT TIGHTENING TORQUE (LB-FT) BOLT SIZE TORQUE BOLT SIZE TORQUE			
BOLT SIZE	TORQUE	BOLT SIZE	TORQUE
3/8" 7/16" 1/2" 3/4"	25 LB FT 50 LB FT 60 LB FT 120 LB FT	8MM 10MM 12MM	20 LB FT 38 LB FT 68 LB FT

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR SAE AND VESC REGULATION VESC SAE AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT, INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

