

55515

BUICK ENCLAVE
BUICK RAINIER
CADILLAC ESCALADE
CHEVY AVALANCHE
CHEVY SILVERADO
CHEVY SUBURBAN
CHEVY TAHOE
CHEVY TRAILBLAZER
GMC ACADIA
GMC ENVOY

GMC SIERRA
GMC YUKON
HUMMER H2 & H3
INFINITI QX56
ISUZU ASCENDER
NISSAN PATHFINDER
NISSAN TITAN
OLDSMOBILE BRAVADA
SAAB 9-7X
SATURN OUTLOOK

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

04/10/07

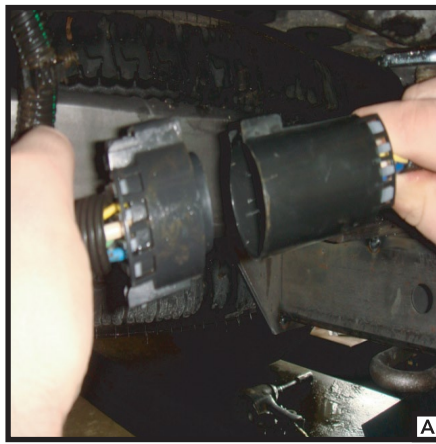

English

For Vehicles without a Factory 7-Way:

1. Locate the tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the bumper, on the driver's side of the vehicle. T3

2. Remove protective cap (and save) from connector; check to see that the mating surfaces of the connectors are free of dirt. Clean if necessary.

3. Connect the T-connector adapter end to the vehicle's connector. [A] Be sure that the T-connector is fully inserted with locking tabs in place.

4. Place protective cap on remaining plug end. Skip to step 7 for remaining installation instructions.

For Vehicles with a Factory 7-Way:

5. Locate the Factory 7-Way attached to the hitch on the driver's side.

6. Separate the factory socket and 7-Way.

7. Plug the T-Connector between the Factory socket and 7-Way.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55515