## CLASS 1 TRAILER HITCH RT- 157 Chrysler PT Cruiser


**TOOLS REQUIRED: DRILLS: 1/2"** 

WRENCHES: 3/4", 17mm

2,000 LB GROSS TRAILER WEIGHT, 200 LB TONGUE WEIGHT. WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS AND LIMITATIONS. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

### WARNING: USE ONLY RIGID HITCH APPROVED AND MANUFACTURED DRAW BAR INSERT OR WARRANTY WILL BE VOID

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

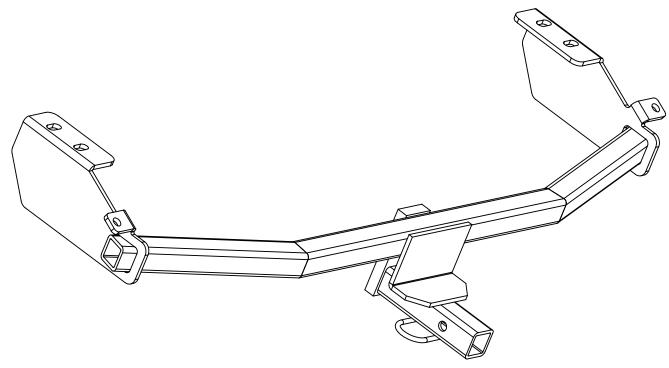

- Remove the tail lights from the vehicle by removing the screw at the bottom of each lens. 1.
- 2. Slide the rubber exhaust hangers off their mounting posts at the front and rear of the muffler.
- 3. Raise the hitch into position and loosely attach it to the weld nuts in the frame using the M10 bolts and conical washers provided.
- Using the outward facing tabs as a template, drill a 1/2" hole in the vehicle's frame on each side. 4.
- Insert a reinforcement plate onto the 1/2" carriage bolt provided and fishwire both through the tail light 5. opening and down through the hole drilled in step 4. Secure with a lock washer and nut. Repeat for the other side.
- Re-attach the exhaust hangers removed in step 2. 6.
- 7. Replace the tail lights removed in step 1.

# Thank you for purchasing a Rigid Hitch

#### TIGHTEN ALL FASTENERS TO THE TORQUE SPECIFICATIONS SHOWN BELOW

1/2" lock washers

 $(2) 1/4 \times 1-1/2 \times 2$ " reinforcement plates

Hardware Package:

(4) M10 x 1.50 x 40mm bolts

3/8" conical washers

1/2-13 x 1-3/4" carriage bolts

(1) fishwire (2) 1/2-13 nuts (1) UB-6001 drawbar kit

#### GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER

BOLT	<b>TIGHTENIN</b>	IG TORQUE (LI	3-FT)
<b>BOLT SIZE</b>	<u>TORQUE</u>	<u>BOLT SIZE</u>	<u>TOŔQUE</u>
3/8" 7/16" 1/2" 3/4"	25 LB FT 50 LB FT 60 LB FT 120 LB FT	8MM 10MM 12MM	20 LB FT 38 LB FT 68 LB FT

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

